



## 6.7 LED / REMOTE RECEIVER / THERMOSTAT REPLACEMENT

- A. To replace LED lights in the ember bed, flame and/or decorative lights, disconnect the quick connect plug from the control board and replace with new one.
- B. To replace the remote receiver and thermostat wires, disconnect the quick connect plug from the control board and replace with new one.

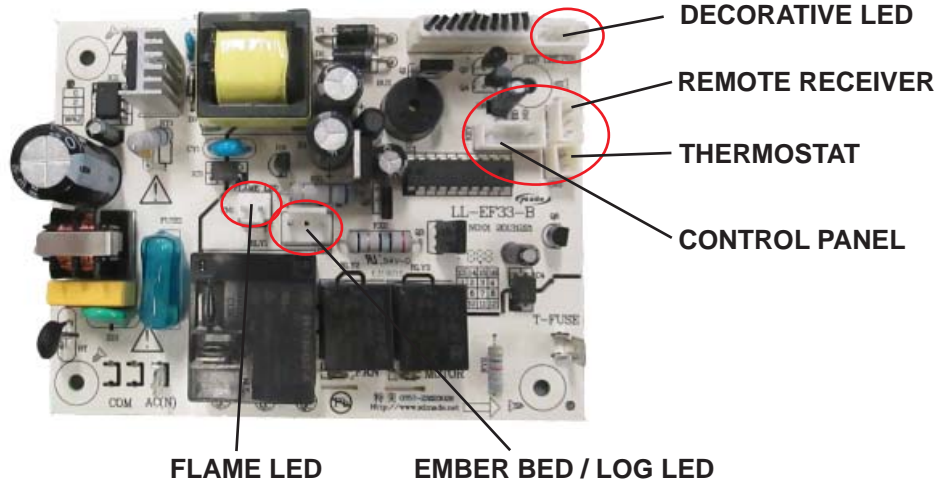


## 6.8 FUSE REPLACEMENT

- A. Remove the plastic cover from the fuse. Pull the fuse (2A/250V) out from the control board.

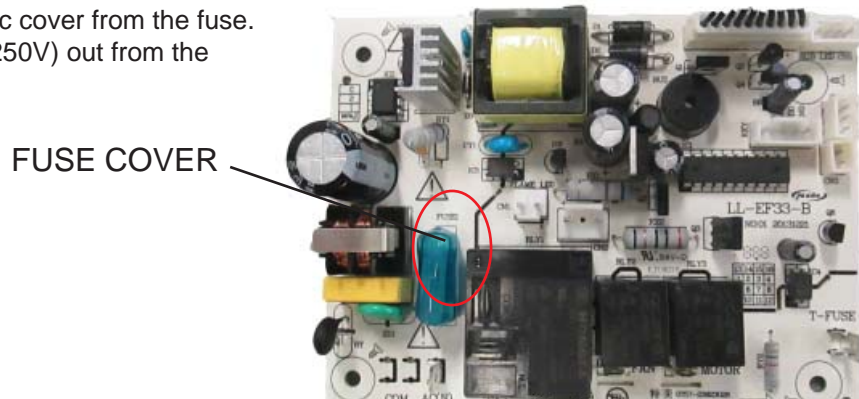

## 6.8 REMPLACEMENT DE THERMOSTAT / TELECOMMANDE / DEL

- A.** Pour remplacer les ampoules DEL décoratives ou celles du lit de braises ou du jeu de flammes, débranchez le raccord rapide du panneau de contrôle et remplacez-les par de nouvelles.
- B.** Pour remplacer les fils du récepteur et du thermostat, retirez la fiche à connexion rapide du panneau de contrôle et remplacez-les par de nouveaux.

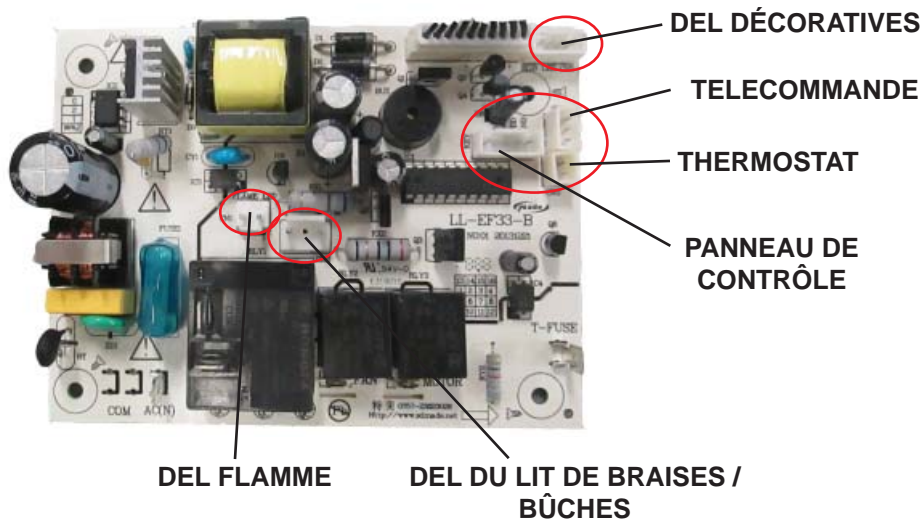

## 6.7 REMPLACEMENT DE FUSIBLE

- A.** Enlever la couverture du fusible pour gagner l'accès au fusible (2A/250V), remplacer le fusible en existence avec le nouveau fusible.

LA COUVERTURE DU FUSIBLE

